



Safety Interlock Switch

Operating Instructions

IMPORTANT NOTE:

Read and understand these instructions before installing, operating, or maintaining this equipment.

The product is designed to be a component of a customised safety orientated control system. It is the responsibility of each manufacturer to ensure the correct overall functionality of its systems and machines. IDEM, its subsidiaries and affiliates, are not in a position to guarantee all of the characteristics of a given system or product not designed by IDEM.

Application:

IDIS-1 Tongue (Key) Interlock Switches are designed to be mounted for interlock position sensing of hinged moving guards.

They can be fitted to the leading edge of sliding, hinged or lift off guards.

They have positive opening contacts in accordance with IEC 60947-5-1 and the switch design offers a tamper resistant actuator key. They are available with either an angled or flat actuator fixing to cover most fixing positions and contact blocks are available in slow make/break 2NC 1NO, 3NC or 1NC 1NO snap action. Enclosures are protected to IP67.

Operation of the switches is achieved by withdrawing the actuator key from the switch to cause deflection of the switch plunger. Positive actuation of the contacts is achieved at 5mm withdrawal of the actuator.

Installation guide:


Correct Mounting of Interlock Switches is critical to obtain optimum performance and ensure safety reliability.

Installation of all switches must be in accordance with a risk assessment for the individual application.


Installation must only be carried out by competent personnel and in accordance with these instructions.

Warning: Do not defeat, bypass or tamper with this switch, severe injury may result.


- Never use the switch as a mechanical stop. 1
- To ensure that the actuator and switch are protected from mechanical shock, guides and stops must be used to prevent mechanical damage.
- The heads of the switch can be rotated to obtain the best switch orientation by removing the 4 head screws and rotating the head through 90 degrees. Always ensure the 4 head screws are tightened to 1Nm to ensure switch robustness. Always fit the blanking plug (supplied) to the unused actuator entry aperture. When mounting to the guard door align and fix the switch body and actuator using 2 x M4 mounting bolts tightened at 1.5Nm.
- 4
- Typical applications:

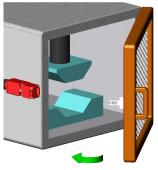

Hinged guard

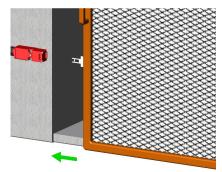

Sliding guard

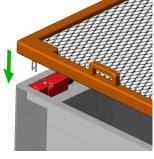

Lift off guard

Contact Blocks/Connections: Slow Make Break 2NC 1NO

32 21 22 11 12

Slow Make Break 3NC

Snap Action 1NC 1NO



Quick Connect 1/2" UNF



Quick Connect M12

Quick Connect (QC)		Quick Connect (QC)
½" UNF 6 Way Male	Switch Circuit	M12 8 Way Male
(Connector length 14mm)		(on Flying Lead 250mm)
Pin view from switch		Pin view from switch
1 5	11/12	1 7
2 6	21/22 or 23/24	6 5
3 4	33/34 or 31/32	4 3

Safety Interlock Switch

- Always ensure that when fitting electrical conductors that they are routed correctly and do not interfere with the switch cover during fitting.
 Recommended conductor size is 1.5 2.5sq.mm, contact terminal tightening torque is 1Nm.
- Tightening torque for the lid screw and cable glands is 1Nm to maintain IP rating.
- 8. Check that the machine is stopped and cannot be started when the interlocked guard is open.
- 9. After installation apply tamper resistance paint or compound to the actuator and switch mounting bolts.

Maintenance:


Every Week: Check the switch actuator and body for signs of mechanical damage and wear. Replace any switch showing damage.

Check that the machine is stopped and cannot be started when the interlocked guard is open.

Every 6 Months: Check for mechanical damage to switch body or actuator. Replace any switch showing damage.

Isolate power and remove cover. Check screw terminal tightness and check for signs of moisture ingress. Never attempt to repair any switch.

Application Example: Door Interlock - Dual Channel non-monitored.

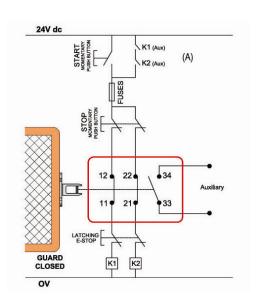



This system shows interlock switch circuits 11-12 and 21-22 configured to allow dual circuit direct feeds to contactor coils K1 and K2.

When the start button is pressed and then released, the auxiliary contacts (A) of contactors K1 and K2 maintain the feed to the contactor coils.

Opening of the Interlock Switch or depressing the E Stop will isolate power to the contactor coils. Re-start can only occur providing the Guard is closed and the E Stop is reset.

System is shown with the guards closed and the machine able to start.

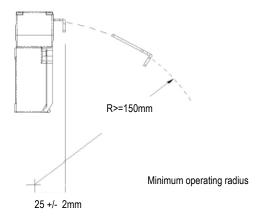

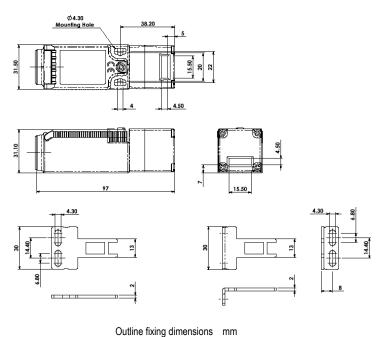

Information with regard to UL 508:

Type 1 Enclosures.
Control Number 35NV
Use 16 - 12AWG copper conductors rated 90°C minimum.
Intended for same polarity use and one polymeric conduit connection.
Electrical Rating:
Max. Switching Current / Volt / Amp: 120V. 6A. (720VA break) PF 0.38 240V. 3A. (720VA break) PF 0.38
Operating Temperature 40°C

Standards:

EN1088, 50047, IEC 60947-5-1, EN60204-1 ISO 13849-1, EN62061, UL508

Safety Classification & Reliability Data: Mechanical Reliability B10d 2.5 x 106 operations at 100mA load Up to Category 4 with Safety Relay ISO 13849-1 Up to PLe depending upon system architecture EN62061 Up to SIL3 depending upon system architecture Safety Data - Annual Usage 8 cycles per hour/24 hours per day/365 days PFHd 3.4 x 10-8 Proof Test Interval (Life) 35 years 356 years MTTFd AC15 A300 3A **Utilization Category** Thermal Current (Ith) Rated Insulation/Withstand Voltages 600VAC/2500VAC Actuator Travel/Force for Positive Opening 6mm/12N Actuator Entry Minimum Radius 100mm Flexible 175mm Standard

Actuator Entry Minimum Radius

Maximum Approach Withdrawal Speed
Body Material
Enclosure Protection
Operating Temperature
Vibration

Actuator Entry Minimum Radius
175mm Standard
100mm Flexib
600mm/s
Polyester
1P67
25C +80C
12C 68-2-6 10-55Hz+1Hz

Vibration Ecos-20 10-3012+112
Excursion: 0.35mm, 1 octave/min
Conduit Entry Various (see sales part numbers)
Fixing 2 x M4